

Window Security Screens Installation Guide

Installation Steps:

Note: Screens can be installed directly into brick, wood and stucco.



Top Hinged Screen - Screw placement across top hinge panel only. Uses slide-bolt closure. Slide-bolts click into the window track, no additional interior installation required. (see *Top Hinge caption*)

Fixed Screen - Screw placement, all the way around the subframe. Fixed screens are screwed into place, non-operable and will not have spring-loaded slide-bolts. (see *Fixed Screen caption*)


Screens with Subframe - Screw placement, all the way around the subframe. Screens with Subframe are operable with interior spring-loaded slide-bolts. (see *Subframe caption*)




Non-corrosive, spring-loaded slide-bolts to securely latch for operable Top Hinged and Subframe Screens.

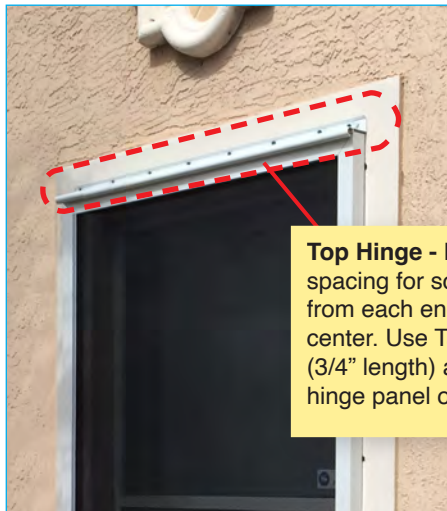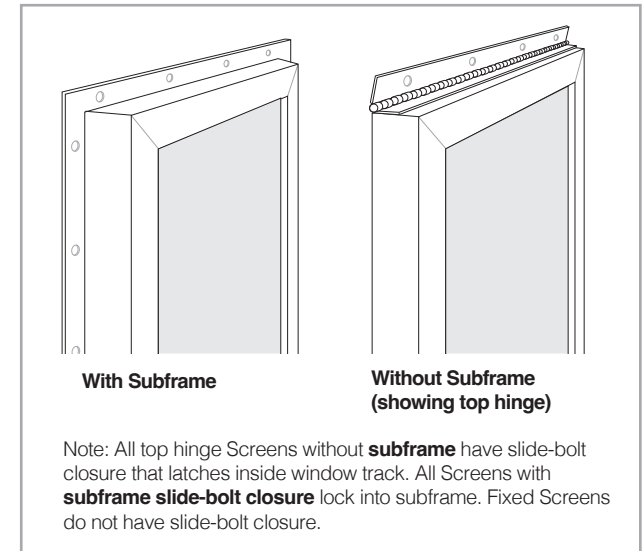

Top Hinged - shown installed on stucco

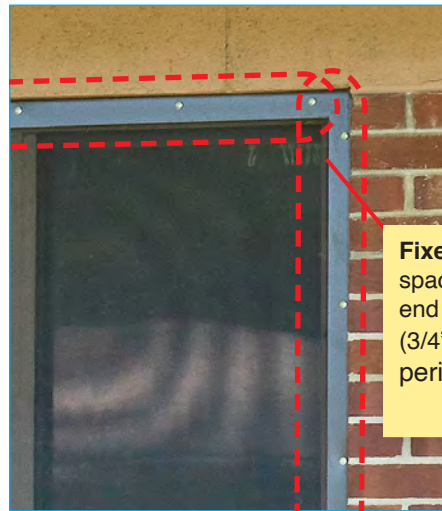

Fixed Screen - shown installed on brick

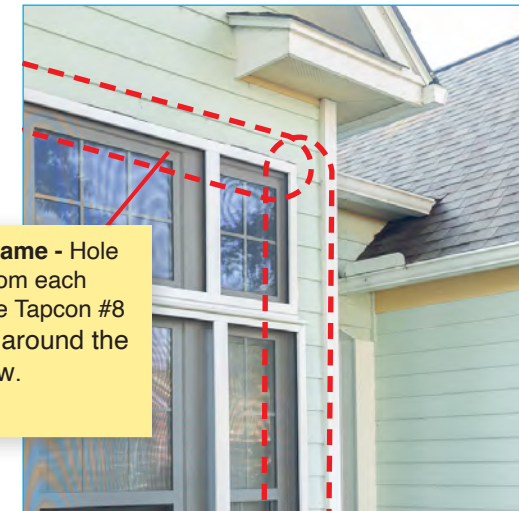

Subframe - shown installed on wood siding



Bahama Screens and Doors

A CGS Sales Company

Bahama Screens
3672 Silliman St.
New Waterford, Ohio 44445

Contact information

Phone: (305) 962-6581
Email: sales@bahamascreensanddoors.com
Web: bahamascreensanddoors.com

